

Synopsis: Installation of the Hero PT1000 Pass Printer & Print Dispatcher

Part 1: Printer Installation

Installation of the PT1000 Pass Printer

Step 1: Unbox the PT1000 printer and plug in to power and use the USB printer cable to connect to your computer. Load a roll of pass printer paper with the pass paper being fed from the top of the roll instead of underneath. Ensure Printer is powered on

Windows Printer Drivers	Seagull Driver Wizard	Seagull Driver Wizard
License Agreement Please read the following license agreement carefully.	Plug and Play Printer Detection New Plug and Play printers are automatically detected for installation.	Seagull Driver Wizard Completed Successfully
WINDOWS PRINTER DRIVER	Select the printer driver to install. (a) Install a driver for a Plug and Play printer	The following operations were completed successfully: Installed printer 'BP4'.
Seagul Scientific, Inc. ("Seagul") grants you a non-exclusive license to use the	Printer Model Port	
accompanying Windows Printer Driver(s) and related documentation ("Seagul Software"), subject to the following provisions. You assume full responsibility for the selection of the Seagul Software to achieve your intended results, and for the installation, use, and results obtained from the Seagul Software.	BP-4 USB003	
Softh the software and the related material are Copyrighted and are protected by law. Tible to and all rights and interests in the Seaguil Software, wherever resident and on whatever media, are and shall remain the property of Seanul. Furthermore, by usion		
I accept the terms in the license agreement I do not accept the terms in the license agreement	Install a driver for another printer	
< Back Next > Cancel	<back next=""></back>	Cancel Install Another Printer Close

Step 2: Download the PT1000 drivers from the following ftp site:

ftp://hero:hero@54.209.95.162/pt1000.exe

Step3: Ensure the PT100 Printer is powered on and run the PT1000.exe printer driver, accepting the terms. Click next and choose all the default options.

Part 2: Print Dispatcher Installation

Step 1: Download the latest version of the print dispatcher from the School Login Page



Step 2: After installing the Print Dispatcher, it can be accessed from your taskbar. Click on the Hero icon to configure the print dispatcher.



Step 3: Click on the configure button to open up the printer pass configuration window. Use the drop down to select the Pass Printer and Click on the Calibrate PT1000 printer button to calibrate the printer and ensure that the passes are centered when printed.

Pero Print Dispatcher Status	×	Configure Hero Print Dispatcher	23
	Ver Lrg.	Pass Printer Configuration Pass Printer: BP4 Calibrate PT1000 print() Use Zel Temp Badge Printer Configuration Temp Badge Printer: Calibrate PT1000 printer Use Zel Calibrate PT1000 printer Use Zel	vra LP 2844 code
	Configure		OK Cancel